



Massachusetts Department of Environmental Protection Source Water Assessment and Protection (SWAP) Report For The New Testament Church

What is SWAP?

The Source Water Assessment and Protection (SWAP) program, established under the federal Safe Drinking Water Act, requires every state to:

- Inventory land uses within the recharge areas of all public water supply sources;
- Assess the susceptibility of drinking water sources to contamination from these land uses; and
- Publicize the results to provide support for improved protection.

SWAP and Water Quality

Susceptibility of a drinking water source does *not* imply poor water quality. Actual water quality is best reflected by the results of regular water tests.

Water suppliers protect drinking water by monitoring for more than 100 chemicals, treating water supplies, and using source protection measures to ensure that safe water is delivered to the tap.

Prepared by the
Massachusetts Department of
Environmental Protection,
Bureau of Resource Protection,
Drinking Water Program

Date Prepared:
July 2010

Table 1: Public Water System (PWS) Information

<i>PWS NAME</i>	The New Testament Church
<i>PWS Address</i>	1120 Long Pond Road
<i>City/Town</i>	North Plymouth, MA 02360
<i>PWS ID Number</i>	4239003
<i>Local Contact</i>	Wayne Krause
<i>Phone Number</i>	(508) 888-1889

<i>Well Name</i>	<i>Source ID#</i>	<i>Zone I (in feet)</i>	<i>IWPA (in feet)</i>	<i>Source Susceptibility</i>
Well #3 –East Well	03G	180	750	Moderate

Introduction

We are all concerned about the quality of the water we drink. Drinking water wells may be threatened by many potential sources of contamination, including septic systems, road salting, and improper disposal of hazardous materials. Citizens and local officials can work together to better protect these drinking water sources.

Purpose of this report:

This report is a planning tool to support local and state efforts to improve water supply protection. By identifying land uses within water supply protection areas that may be potential sources of contamination the assessment helps focus protection efforts on appropriate best management practices (BMPs) and drinking water source protection measures. Department of Environmental Protection (DEP) staff are available to provide information about funding and other resources that may be available to your community.

This report includes:

1. Description of the Water System
2. Discussion of Land Uses within Protection Areas
3. Recommendations for Protection
4. Attachments, including a Map of the Protection Areas

1. Description of the Water System

The New Testament Church draws its drinking water from one well located just to the north of the building. The well has a Zone I of 180 feet and an Interim Wellhead Protection Area (IWPA) of 750 feet. The IWPA provides an interim protection area for a water supply well when the actual recharge area has not been delineated. The actual recharge area to the well may be significantly larger or smaller than the IWPA. The well is located in an aquifer with a high vulnerability to contamination due to the absence of hydrogeologic barriers that can prevent contaminant migration. Please refer to the attached map of the Zone I and IWPA.

The well serving the facility has no treatment at this time. The DEP requires public water suppliers to monitor the quality of the water. For current information on monitoring

What is a Protection Area?

A well's water supply protection area is the land around the well where protection activities should be focused. Each well has a Zone I protective radius and an Interim Wellhead Protection Area (IWPA).

- **The Zone I** is the area that should be owned or controlled by the water supplier and limited to water supply activities.
- **The IWPA** is the larger area that is likely to contribute water to the well.

In many instances the IWPA does not include the entire land area that could contribute water to the well. Therefore, the well may be susceptible to contamination from activities outside of the IWPA that are not identified in this report.

What is Susceptibility?

Susceptibility is a measure of a well's potential to become contaminated due to land uses and activities within the Zone I and Interim Wellhead Protection Area (IWPA).

results and treatment, please contact the Public Water System contact person listed above in Table 1. Drinking water monitoring reporting data is also available on the web via EPA's Envirofacts website at http://www.epa.gov/enviro/html/sdwis/sdwis_query.html.

2. Discussion of Land Uses in the Protection Areas

There are a number of land uses and activities within the drinking water supply protection areas that are potential sources of contamination.

Key issues include:

1. **non-water supply activities in Zone I;**
2. **above ground storage tanks (ASTs) with heating oil;**
3. **septic systems;**
4. **residential development; and**
5. **roads.**

The overall ranking of susceptibility to contamination for the well is moderate, based on the presence of moderate threats within the Zone I and IWPA.

1. **Zone Is** – Currently, the well does not meet DEP's Zone I regulations, which allow only water supply related activities in the Zone I and require that the land within the Zone I be owned or controlled by the public water system. The New Testament Church's Zone I contains components of their septic system. The Zone I is owned by the Church and the DEP commends the Church for meeting this requirement for DEP. Please note that systems not meeting DEP Zone I requirements must get DEP approval and address Zone I issues prior to increasing water use or modifying systems.

Recommendations:

- ✓ Do not use or store pesticides, fertilizers or road salt within the Zone I.
 - ✓ Direct stormwater drainage from parking area away from the well and out of the Zone I.
 - ✓ Never dispose of hazardous materials into septic systems.
 - ✓ Post drinking water protection signs around Zone I area.
2. **Aboveground Storage Tanks (ASTs)** – There are ASTs with heating oil located within the IWPA. If managed improperly, above ground storage tanks can be a

Table 2: Table of Activities within the Water Supply Protection Areas

Potential Contaminant Sources	Zone I	IWPA	Threat	Potential Concern
parking lot	No	Yes	Moderate	stormwater runoff, spills
lawns	Yes	Yes	Moderate	fertilizer and pesticide use
above ground storage tanks	No	Yes	Moderate	leaks, spills
septic systems	Yes	Yes	Moderate	bacteria, improper disposal of hazardous materials
residential development	No	Yes	Moderate	runoff from lawns, septic systems, underground/above ground storage tanks
roads	No	Yes	Moderate	stormwater runoff, spills

* For more information on Contaminants of Concern associated with individual facility types and land uses please see the SWAP Draft Land Use / Associated Contaminants Matrix on DEP's website - www.state.ma.us/dep/brp/dws/.

Glossary

Zone I: The area closest to a well; a 100 to 400 foot radius proportional to the well's pumping rate. To determine your Zone I radius, refer to the attached map.

IWPA: A 400 foot to $\frac{1}{2}$ mile radius around a public water supply well proportional to its pumping rate; the area DEP recommends for protection in the absence of a defined Zone II. To determine IWPA radius, refer to the attached map.

Zone II: The primary recharge area defined by a hydrogeologic study.

Aquifer: An underground water-bearing layer of permeable material that will yield water in a usable quantity to a well.

Hydrogeologic Barrier: An underground layer of impermeable material that resists penetration by water.

Recharge Area: The surface area that contributes water to a well.

potential source contamination due to leaks or spills of the chemicals they store. ASTs should be equipped with containment

Recommendation:

- ✓ Aboveground storage tanks in your IWPA should be located on an impermeable surface, and also contained in an area large enough to hold 110% of the complete liquid volume, should a spill occur.
- ✓ Encourage owners of ASTs to upgrade all oil/hazardous material storage tanks to incorporate proper containment and safety practices. Any modifications to the AST must be accomplished in a manner consistent with Massachusetts's plumbing, building, and fire code requirements. Consult with the local fire department for any additional local code requirements regarding ASTs.

3. **Septic systems** - Septic systems are located within the IWPA of the wells. If a septic system fails or is not properly maintained it could be a potential source of microbial contamination. Improper disposal of household hazardous chemicals to septic systems is a potential source of contamination to the water supply.

Recommendations:

- ✓ Staff should be instructed on the proper disposal of spent household chemicals. Include custodial staff, groundskeepers, and certified operator.
- ✓ Septic system components should be located, inspected, and maintained on a regular basis. Refer to the attachments for more information regarding septic systems.
- ✓ Avoid septic tank cleaners, especially those with acids and solvents.

4. **Residential Development** – There is residential development within the IWPA. Certain activities associated with residential development can be potential source of contamination to groundwater drinking water sources, including lawn care, hazardous materials and septic systems.

Recommendation:

- ✓ Instruct the lawncare and landscaping professionals never to use fertilizers or pesticides within the Zone I.
- ✓ Use best management practices when applying fertilizers or pesticides within the IWPA
- ✓ Educate residents in the IWPA about water supply protection. A brochure is included in this packet.

5. **Roads** – Local roads run throughout the IWPA . Runoff and spills from roads can contaminate public wells.

Recommendation:

- ✓ Continue to maintain contact with the Fire Department about spills.

Implementing the following recommendations will reduce the system's susceptibility to contamination.

3. Protection Recommendations

Implementing protection measures and best management practices (BMPs) will reduce the well's susceptibility to contamination. The New Testament Church is commended for moving their well to meet DEP's Zone I requirements. Church officials should review and adopt the key recommendations above and the following:

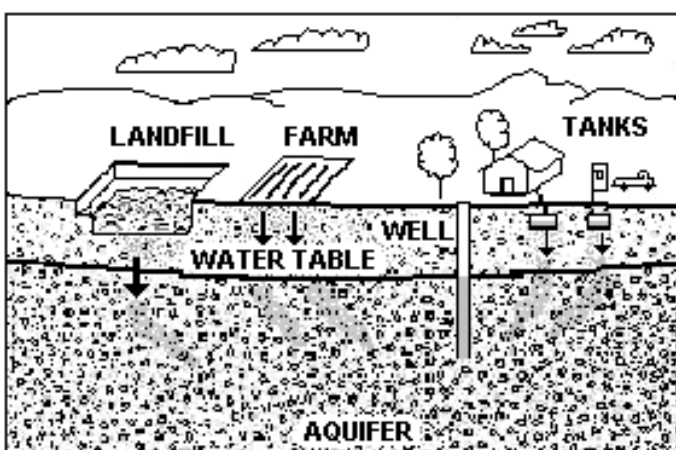


Figure 1: Example of how a well could become contaminated by different land uses and activities.

For More Information:

Contact Isabel Collins in DEP's Lakeville Office at (508) 946-2726 for more information and for assistance in improving current protection measures.

Additional Documents:

To help with source protection efforts, more information is available by request or online at www.mass.gov/dep/water/drinkin/g/sourcewa.htm including:

1. Water Supply Protection Guidance Materials such as model regulations, Best Management Practice information, and general water supply protection information.
2. MA DEP SWAP Strategy
3. Land Use Pollution Potential Matrix
4. Draft Land/Associated Contaminants Matrix

Copies of this assessment have been made available to the public water supplier and town boards.

Priority Recommendations:

Zone I:

- ✓ Keep non-water supply activities out of the Zone I.
- ✓ Post water supply protection signs in the Zone I and IWPA.
- ✓ Continue regular inspections of the Zone I. Look for illegal dumping or evidence of vandalism.
- ✓ Use Best Management Practices (BMPs) and restrict activities that could pose a threat to the water supply.
- ✓ Keep road and parking lot drainage away from the well.
- ✓ Do not use or store pesticides, fertilizers or road salt within the Zone I.

Training and Education:

- ✓ Train staff on proper hazardous material use, disposal, emergency response, and best management practices; include custodial staff, groundskeepers, and certified operator. Post labels as appropriate on raw materials and hazardous waste.
- ✓ Post drinking water protection area signs at key visibility locations.
- ✓ Work with your community to ensure that stormwater runoff at the road is directed away from the well and is treated according to DEP guidance.

Facilities Management:

- ✓ Inspect and maintain the integrity of the containment structure for the AST.
- ✓ Septic system components should be located, inspected, and maintained on a regular basis.

Planning:

- ✓ Work with local officials in town to include the facility's IWPA in the Aquifer Protection District Bylaw and to assist you in improving protection.
- ✓ Supplement the SWAP assessment with additional local information and incorporate it into water supply educational efforts. Use a land use inventory to assist in setting priorities, focusing inspections, and creating educational activities.

Funding:

The Department's Wellhead Protection Grant Program provides funds to assist public water suppliers in addressing wellhead protection through local projects. Protection recommendations discussed in this document may be eligible for funding under that program. For additional information, please refer to DEP's web site. Other funding opportunities are described in *Grant and Loan Programs: Opportunities for Watershed Protection, Planning and Implementation* at <http://www.mass.gov/dep/water/grants.htm>.

Citizens and community officials should use this SWAP report to spur discussion of local drinking water protection measures.

6. Attachments

- Map of the Public Water Supply (PWS) Protection Area.